

No.	Program Name	Total Time (min)	Temp(°C)	Temp (°C) (option)	Speed (rpm)
P01	ECO	100	30	--,30	1100
P02	COTTON Standard	168	60	--,30,40,50,60	1100
P03	COTTON (strongly) --Heavy Duty	110	40	--,30,40,50,60	1100
P04	COTTON (stains) --Extra Heavy Duty	110	60	--,30,40,50,60,90	1100
P05	Quick Wash	35	30	--,30	800
P06	COTTON (+prewash)	100	40	--,30,40,50,60	1100
P07	DELICATE (super soft)	67	30	--,30	600
P08	WOOL	50	-		600
P09	SPIN	10	-		1100
P10	RINSE	14	-		800
P11	DRAIN	2	-		-
P12	WASH	20	-		-
P13	SYNTHETIC (+prewash)	90	40	--,30,40	800
P14	SYNTHETIC (strongly) --Heavy Duty	90	40	--,30,40,50,60	800
P15	SYNTHETIC (standard)	70	40	--,30,40	800
P16	SYNTHETIC (little)	60	-	--,30	800

Troubleshooting

Problems and solutions

The washing machine will not start:

- Make sure the door is firmly closed.
- Make sure the washing machine is plugged in.
- Make sure the water source tap is turned on.
- Make sure to press the 'Start/Pause' button.

No water or insufficient water supply:

- Make sure the water source tap is turned on.
- Make sure the water source hose is not frozen.
- Make sure the water intake hose is not bent.
- Make sure the filter on the water intake hose is not clogged.

Detergent remains in the detergent drawer after the wash program is complete:

- Make sure the water supply tap is on sufficiently to provide enough pressure for the machine to operate.
- Put the detergent in the inner parts of the detergent drawer (away from the outside edges),

Washing machine vibrates or is too noisy:

- Make sure the washing machine is set on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance (see page 6).
- Make sure that the shipping bolts are removed (see page 7).
- Make sure the washing machine is not touching any other object.
- Make sure the water hose's mesh filter is not clogged (see page 5).

Understanding error messages

Error displayed	Solution
E01	- Close the door
E02	- Make sure the water source tap is turned on - Check the water pressure - Make sure the water source hose is not frozen - Make sure the water intake hose is not bent - Make sure the filter on the water intake hose is not clogged - Check the end of the drain hose is low enough
E03	- Clean the debris filter - Make sure the drainage is installed correctly

Before contacting After-Sales service:

1. Try to remedy the problem (See "Troubleshooting" on this page)
2. Restart the program to see if the fault is repeated
3. If the malfunction persists, call after-sales service and describe the problem.